

680nm 1.5W Fiber Coupled Laser Diode Module with TEC cooler | Built-in Photodiode

680nm~685nm Red Laser Module with 9-Pin Package| 200um Fiber Core | 1.5W Output Power

WSLX-680-1500m-200M-H9-T-PD

Wavespectrum Laser Group

en.wavespectrum-laser.com.cn


PARAMETER	SYMBOL	VALUE	UNIT
Reverse Voltage	V_r	2.0	V
Operating Temperature	T_{op}	+10 ~ +30	°C
Storage Temperature	T_{stg}	-20 ~ +80	°C
Lead soldering temperature (10 sec.)	T_{is}	260	°C

Features:

- 680nm
- 9-Pin Package
- Built-in TEC cooler
- Built-in PD

Applications:

- Medical Laser Treatment
- Laser Show
- Others

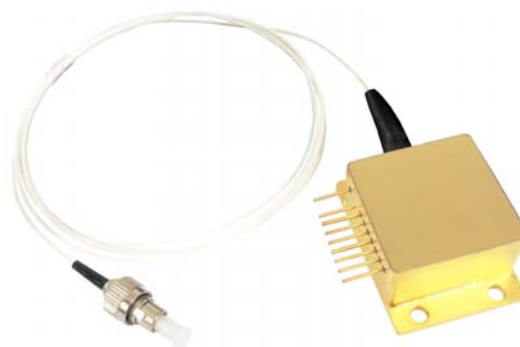

Specifications

WSLX-680-1500m-200M-H9-T-PD

	Min	Type	Max
Center Wavelength@25°C	680nm ± 10nm		
Spectral Width (FWHM)	----	5nm	----
Output Power	----	1.5W	----
Temperature Coefficient of Wavelength	----	0.2nm / °C	----
Threshold Current (Typ.)	----	0.4A	----
Operating Current (Typ.)	----	1.1A	----
Operating Voltage	----	4.8V	----
Recommended Case Temperature	25°C		
TEC Max. Current	6A		
TEC Max. Voltage	9.8V		
Fiber Core Diameter	200um		
Fiber Numerical Aperture	0.22		
Fiber Length	>80cm		
Connector Type	SMA905 / FC		
Package Style	9-Pin Package		


Wavespectrum Laser Group

www.wavespectrum-laser.com

sales@wavespectrum-laser.com



9-PIN HHL Package View

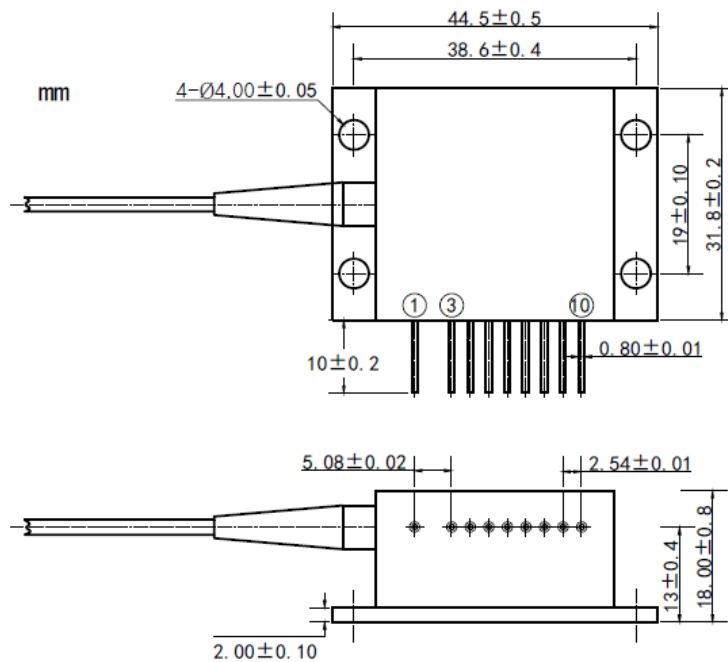

PIN	FUNCTION
1	TEC (-)
2	-
3	CASE
4	LD (+)
5	THERM
6	THERM
7	LD (-)
8	PD (P)
9	PD (N)
10	TEC (+)

Wavespectrum offer Customized 680nm Fiber Coupled LD.

- Customized Output Power
- Customized Fiber Core
- Dual-Wavelength or Tri-Wavelength Module Optional
(such as 2w@680nm+10w@808nm)

Contact us with info@wavespectrum-laser.com

Electrically shorten LD module and store in non-extreme conditions.

Suggest using the constant current power supply.



Wavespectrum Laser Group
www.wavespectrum-laser.com
sales@wavespectrum-laser.com

